



PARTS LIST

No.	Parts No.	Description	Q'ty
1	7830L-01	Housing	1
2	7830L-02	Protector Cover	1
3	7830L-03	Ball Bearing	1
4	7830L-04	Work Spindle (1/4"-28UNF)	1
5	7830L-05	Driven Gear	1
6	7830L-06	Washer	1
7	7830L-07	Ball Bearing	1
8	7830L-08	Connect Nut	1
9	7830L-09	Fix Pedestal	1
10	7830L-10	Screw	1
11	7830L-11	Retainer Ring	1
12	7830L-12	Driving Gear	1
13	7830L-13	Ball Bearing	1
14	7830L-14	Bearing Seat	1
15	7830L-15	Front End Plate	1
16	7830L-16	Rotor	1
17	7830L-17	Rotor Blade	4
18	7830L-18	Key	1
19	7830L-19	Cylinder	1
20	7830L-20	Pin	1

No.	Parts No.	Description	Q'ty
21	7830L-21	Rear End Plate	1
22	7830L-22	Ball Bearing	1
23	7830L-23	Protector Cover	1
24	7830L-24	Connect Nut	1
25	7830L-25	Screw	1
26	7830L-26	Rear Housing	1
27	7830L-27	Throttle Lever	1
28	7830L-28	Pin	1
29	7830L-29	Valve Stem	1
30	7830L-30	POM ball	1
31	7830L-31	Spring	1
32	7830L-32	O-Ring	1
33	7830L-33	Screw	1
34	7830L-34	Grinder Wheel Fender	1
35	7830L-35	Washer	2
36	7830L-36	Cap Screw	2
37	7830L-37	Wrench (19mm)	1
38	7830L-38	Hex Key	1
39	7830L-39	Hex Key (3mm)	1

ST-7830L-P-1109A-HY