



### PARTS LIST

No.	Parts No.	Description	Q'ty
1	3393-01	Lock Pin	1
2	3393-02A	1/8" Collet	1
	3393-02B	3mm Collet	1
3A	3393-03A	Collet Foundation	1
4	3393-04	Ball Bearing	1
5	3393-05	Front End Plate	1
6	3393-06	Rotor	1
7	3393-07	Rotor Blade	4
8	3393-08	Cylinder	1
9	3393-09	Ball Bearing	1
10	3393-10	Rear End Plate	1
11	3393-11	Angle Housing	1
12	3393-12	Body	1

No.	Parts No.	Description	Q'ty
13	3393-13	Air Intake Tube	1
14	3393-14	Hose Plug	1
15	3393-15	Short Pin	1
16	3393-16	O-Ring	2
17	3393-17	Sliding Knob	1
18	3393-18	O-Ring	1
19	3393-19	Screw	1
20	3393-20	Rear End Holder	1
21	3393-21A	Air Inlet W/Hose (PT19)	1
	3393-21B	Air Inlet W/Hose (NPT18)	1
22	3393-22	Silencer	1
26	3393-26	Wrench (6mm)	1
27	3393-27	Wrench (8mm)	1

ST-3393(M)-P-1301B-FA