



PARTS LIST

No.	Parts No.	Description	Q'ty	No.	Parts No.	Description	Q'ty
1	7432-01	Housing	1	14	7432-14	Cylinder (Incl. Pin)	1
2A	7432-02A	Valve Bushing	1	16	7432-16	Rear End Plate	1
3	7432-03	Housing Cap	1	17	7432-17	Ball Bearing	1
4	7432-04A	1/4" Collet (Incl. Nut)	1	18	7432-18	Protector Cover	1
	7432-04B	6mm Collet (Incl. Nut)	1	19	7432-19	Valve Stem	1
6	7432-06	Collet Holder	1	20	7432-20	POM Ball	1
7	7432-07	Protector Cover	1	21	7432-21	Spring	1
8	7432-08	Ball Bearing	1	22	7432-22	O-Ring	1
9	7432-09	Front End Plate	1	23	7432-23	Screw	1
10	7432-10	Socket	1	24A	7432-24A	Throttle Lever	1
11	7432-11	Key	1	25	7432-25	Throttle Lever Pin	1
12	7432-12	Rotor	1	26	7432-26	Wrench (14mm)	2
13	7432-13	Rotor Blade	4				

ST-7432(M)-P-1208B-HY