



PARTS LIST

No.	Parts No.	Description	Q'ty	No.	Parts No.	Description	Q'ty
1	4481-01	Housing	1	28	4481-28	Clam Nut	1
2	4481-02	Pin	1	29	4481-29	Drive Do	1
3	4481-03	Air Inlet	1	30	4481-30	Retainin Rin	3
4	4481-04	Tri	1	31	4481-31	Retainin Rin	1
5	4481-05	Valve Stem	1	32	4481-32	Cam S indle	1
6	4481-06	Reverse Bushin	1	33	4481-33	Steel Ball	1
7	4481-07	O-Rin	1	34	4481-34	Clutch Carrier	1
7A	4481-07A	O-Rin 3.9x2.25x2	1	35	4481-35	Steel Ball	4
8	4481-08	Valve S rin	1	36	4481-36	Washer	1
9	4481-09	O-Rin	1	37	4481-37	S rin	1
10	4481-10	Reverse Lever	1	38	4481-38	Washer	1
13	4481-13	Ball Bearin	2	39	4481-39	dust Nut	1
14	4481-14	End Plate	1	40	4481-40	S acer	1
15	4481-15	Rotor	1	41	4481-41	Clutch Housin	1
16	4481-16	Rotor Blade	5	42	4481-42	Ball Retainer	1
17	4481-17	Pin	1	43	4481-43	S rin	1
18	4481-18	Cylinder	1	44	4481-44	Washer	1
19	4481-19	Front End Plate	1	45	4481-45	Pinion Gear	1
20	4481-20	S rin	1	46	4481-46	Set Screw	1
21	4481-21	S rin Guide	2	47	4481-47	O-Rin	1
22	4481-22	Internal Gear	6	48	4481-48	Exhaust Diffuser	1
23	4481-23	Planet Gear	6	49	4481-49	Screw	2
24	4481-24	Pin	1	50	4481-50	Reduction S indle	1
26	4481-26	Work S indle	1	51	4481-51	Center Gear	1
27	4481-27	Ball Bearin	1				