



PARTS LIST

No.	Parts No.	Description	Q'ty	No.	Parts No.	Description	Q'ty
1	4463-01	Retaining Ring	1	26	4463-26	Screw	1
2	4463-02	Washer	1	27	4463-27	Handle	1
3	4463-03	Spring	1	28	4463-28	Pin (Ø3x24)	2
4	4463-04	Bushing	1	32	4463-32A	Air Inlet (19PT)	1
5	4463-05	Front Cap	1		4463-32B	Air Inlet (18NPT)	1
7A	4463-07A	Bushing	1	33	4463-33	Muffler	1
8	4463-08	Anvil	1	34A	4463-34A	Valve Rod	1
9	4463-09	Pin (Ø4.75x29)	2	35	4463-35	O-Ring (S16)	1
10	4463-10	Ring	2	36	4463-36	Bushing	1
11	4463-11	Hammer Case	1	37A	4463-37A	Speed Switch	1
12	4463-12	Bolt	1	38A	4463-38A	Steel Ball (Ø3.175mm)	2
13	4463-13	Ball Bearing (R6)	2	39	4463-39	Spring	2
14	4463-14	Oil Seal	1	40	4463-40	Screw	1
15	4463-15	Front Plate	1	41A	4463-41A	Reverse Valve	1
16	4463-16	Steel Ball (Ø4mm)	2	43	4463-43	Pin (Ø2x14)	1
17	4463-17	Rotor	1	44	4463-44	Switch Lever	1
19	4463-19	Rotor Blade	7	45	4463-45	Spring	1
20	4463-20	Pin (Ø2x6)	2	46	4463-46	O-Ring (P4)	1
21	4463-21	Cylinder	1	47	4463-47	Adjuster	1
23	4463-23	Rear Plate	1	48	4463-48	Reverse Valve	1
24	4463-24	Hook	1	49	4463-49	Pastic Grip	1
25	4463-25	O-Ring (P11.2)	1				