



PARTS LIST

No.	Parts No.	Description	Q't	No.	Parts No.	Description	Q't
1	6614-01	Plu	1	22	6614-22	Ball Bearin 626ZZ	1
2	6614-02	Ball Bearin 607ZZ	1	23	6614-23	Throttle Lever	1
3	6614-03	Head	1	24	6614-24	Lever Pin M3x23	1
4	6614-04	Ball Bearin 6900ZZ	1	25	6614-25	Housin	1
5	6614-05	Seal Oil	1	26	6614-26	O-Rin 3.6x2.4	1
6	6614-06	Nut-Clam	1	27	6614-27	Valve Stem	1
7	6614-07	S indle Drive	1	27A	6614-27A	O-Rin P5	1
8	6614-08	Blade 57mm 2-1/4"	1	28	6614-28	Valve S rin	1
9B	6614-09B	Retainer	1	29	6614-29	ir Re ulator	1
9C	6614-09C	Screw M8x20	1	30	6614-30	O-Rin P7	1
10	6614-10	Fork Drive	1	31	6614-31	O-Rin P12	1
11	6614-11	Ball Bearin 607ZZ	1	32	6614-32	Throttle Valve Plu	1
12	6614-12	Shaft Crank	1	33	6614-33	Valve Bushin	1
13	6614-13	Nut	1	34	6614-34	Throttle Artor	1
14	6614-14	Retainer	1	35	6614-35	Sto Rin	1
15	6614-15	Ball Bearin 6000ZZ	1	36	6614-36	ir Hose Ass' 1/4	1
16	6614-16	Front Plate	1	36A	6614-36A	S on e	1
16A	6614-16A	Washer	1	37	6614-37	Exhaust Hose	1
17	6614-17	Rotor	1	38	6614-38	Packin	1
18	6614-18	Rotor Blade	4	39	6614-39	Screw M5x6	1
19	6614-19	C linder	1	40	6614-40	O-Rin P5	1
20	6614-20	End Plate	1	41	6614-41	Hexa on Wrench Ke 5	1
21	6614-21	Pin 2.5x4	3				

ST-6614-P-0411A-PZ