



PARTS LIST

No.	Parts No.	Description	Q'ty
1	66201-01	Housing	1
2	66201-02	Bushing	1
3	66201-03	Spring	1
4	66201-04	Shaft	1
5	66201-05	Bumper	1
6	66201-06	Spring Plate	1
7	66201-07	Join Ter	1
8	66201-08	Piston	1
9	66201-09	Piston Ring	1
10	66201-10	Damping Ring	1
11	66201-11	Housing Cap	1
12	66201-12A	Air Inlet (PT19)	1
	66201-12B	Air Inlet (NPT18)	1
13	66201-13	Screw	1
14	66201-14	O-Ring	1
15	66201-15	Spring	1
16	66201-16	Front Push Rod	1
17	66201-17	O-Ring	1
18	66201-18	Damping Ring	1
19	66201-19	Valve Stem	1
20	66201-20	Screw	1
21	66201-21	Washer	1

No.	Parts No.	Description	Q'ty
22	66201-22	Lever	1
23	66201-23	Pin	1
24	66201-24	Handle Guard	1
25	66201-25	Nut	1
26	66201-26	Washer	1
27	66201-27	Left Blade	1
28	66201-28	Right Blade	1
29	66201-29	Pin	1
30	66201-30	Washer	1
31	66201-31	Guide Plate	1
32	66201-32	Bolt	1
33	66201-33	Nut	1
34	66201-34	Pin	1
35	66201-35	Screw (M4X6L)	2
36	66201-36	Screw (M4X8L) & Spring Washer	2
37	66201-37	Screw (M4X12L)	1
38	66201-38	Insure	1
39	66201-39	Steel Ball	2
40	66201-40	Spring	2
41	66201-41	Screw (M4X6L)	2
43	66201-43	Screw (M4X8L)	1

ST-66201-P-1301C-ST