



## PARTS LIST

No.	Parts No.	Description	Q'ty
1	6627A-01	Housing	1
2	6627A-02	Valve Bushing	1
3	6627A-03	Trigger [Incl. Lever, Spring, Pin]	1
7	6627A-07	Trigger Pin	1
8	6627A-08	O-Ring	1
9	6627A-09	O-Ring	1
10	6627A-10	Valve Stem	1
11	6627A-11	Spring	1
12	6627A-12	Air Regulator	1
13	6627A-13	O-Ring	1
14	6627A-14	O-Ring	1
15	6627A-15	Valve Plug	1
16	6627A-16	Muffle Cover	1
17	6627A-17	Air Inlet	1
18	6627A-18	Bearing	1
19	6627A-19	End Plate	1
20	6627A-20	Steel Ball	2

No.	Parts No.	Description	Q'ty
21	6627A-21	Rotor	1
22	6627A-22	Rotor Blade	4
23	6627A-23	Cylinder	1
24	6627A-24	Rotor Spacer	1
26	6627A-26	Front Plate	1
27	6627A-27	Set Pin	1
28	6627A-28	Bearing	1
29	6627A-29	Work Spindle	1
30	6627A-30	Retainer	1
31	6627A-31	Protector	1
32	6627A-32	Lock Nut	1
33	6627A-33	Cutting Disc	1
34	6627A-34	Washer	1
35	6627A-35	Bolt	1
36	6627A-36	Hex Wrench	1
37	6627A-37	Wrench	1
38	6627A-38	Muffler Disc	1

ST-6627-P-0903B-HY