



## PARTS LIST

No.	Parts No.	Description	Q'ty
1	6706-01	Back Head Assembly [Incl. 2, 15]	1
2	6706-02	Bushing	1
2A	6706-02A	Throttle Valve Seat	1
3	6706-03	Valve Stem (For Inside Trigger)	1
4	6706-04	Throttle Valve	1
5	6706-05	Spring	1
6	6706-06	O-Ring	1
10B	6706-10B	Air Inlet (Option)	1
11	6706-11	Rubber Cap ( for Inside Trigger )	1
12	6706-12	Pin	2
13	6706-13	Inside Trigger (Option )	1
13A	6706-13A	Outside Trigger (Option )	1
14	6706-14	Spring Pin	2
15	6706-15	Reverse Valve Bushing	1
16	6706-16	O-Ring	1
17	6706-17	Reverse Valve Assembly [Incl. 20]	1
18	6706-18	Steel Ball	1
19	6706-19	Spring	1
20	6706-20	Spring Pin	1
21	6706-21	Spring Washer	4
21A	6706-21A	Screw Assembly [Incl. 21(4)]	4
22	6706-22	Gasket	1
23	6706-23	Ball Bearing	1
24	6706-24	Rear End Plate Assembly [Incl. 23]	1
26	6706-26	Rotor Blade	6
27	6706-27	Rotor	1
28	6706-28	Cylinder	1
29	6706-29	Spring Pin	1
29A	6706-29A	Spring Pin	1
30	6706-30	Front End Plate Assembly [Incl. 31]	1
31	6706-31	Ball Bearing	1

No.	Parts No.	Description	Q'ty
32	6706-32	Gasket	1
33	6706-33	Housing Assembly [Incl. 56(8), 60(4)]	1
34	6706-34	Ball Bearing	1
35	6706-35	Hammer Pin	2
36	6706-36	Hammer Frame	1
37	6706-37	Hammer	2
38A	6706-38A	Standard Anvil [Incl. 48, 49]	1
38B	6706-38B	6" Extended Anvil [Incl. 48, 49]	1
40	6706-40	Washer	1
41	6706-41	Bushing	1
42	6706-42	Gasket	1
43	6706-43	Hammer Case	1
44	6706-44	Screw [Incl. 44A(4)]	4
44A	6706-44A	Spring Washer	4
45	6706-45	Side Spade Handle	1
46	6706-46	Screw Assembly [Incl. 46A(4)]	4
46A	6706-46A	Spring Washer	4
47	6706-47	Oil Seal	1
48	6706-48	O-Ring	1
49	6706-49	Socket Retainer	1
52	6706-52	Lock Nut (Option)	1
53	6706-53	Air Inlet (Option)	1
54	6706-54	O-Ring (Spline Anvil)	1
56	6706-56	Heli-Coil	8
59	6706-59	Throttle Valve Plunger (For Outside Trigger)	1
60	6706-60	Steel Ball	4
TK	6706-TK	Tune-Up Kit [Incl. 5, 6, 16, 18, 19, 22, 23, 26(6), 31, 32, 34, 42, 48, 49]	

ST-6706(-6)-P-0909C-01