



### PARTS LIST

| No. | Parts No. | Description               | Q'ty |
|-----|-----------|---------------------------|------|
| 1   | 5540-01   | Housing with Valve Sleeve | 1    |
| 2   | 5540-02   | [Incl. 1, 2]              |      |
| 3   | 5540-03   | Reverse Valve             | 1    |
| 4   | 5540-04   | Trigger                   | 1    |
| 5   | 5540-05   | Pin                       | 1    |
| 6   | 5540-06   | Valve Stem                | 1    |
| 7   | 5540-07   | Valve Seat                | 1    |
| 8   | 5540-08   | Steel Ball                | 1    |
| 9   | 5540-09   | Spring                    | 1    |
| 10  | 5540-10   | Air Inlet                 | 1    |
| 11  | 5540-11   | Air Regulator             | 1    |
| 12  | 5540-12   | O-Ring                    | 1    |
| 13  | 5540-13   | Screw                     | 1    |
| 14  | 5540-14   | Spring                    | 1    |
| 15  | 5540-15   | Bushing                   | 1    |
| 16  | 5540-16   | Anvil Collar              | 1    |
| 17  | 5540-17   | O-Ring                    | 1    |
| 18  | 5540-18   | Anvil(1/2")               | 1    |
| 19  | 5540-19   | Hammer Cage               | 1    |
| 20  | 5540-20   | Pin                       | 1    |
| 21  | 5540-21   | Hammer Dog                | 1    |
| 22  | 5540-22   | Drive Cam                 | 1    |

| No. | Parts No. | Description    | Q'ty |
|-----|-----------|----------------|------|
| 23  | 5540-23   | Ball Bearing   | 2    |
| 24  | 5540-24   | Cylinder       | 1    |
| 25  | 5540-25   | Rotor          | 1    |
| 26  | 5540-26   | Rotor Blade    | 6    |
| 27  | 5540-27   | Front Plate    | 1    |
| 28  | 5540-28   | Pin            | 1    |
| 29  | 5540-29   | End Plate      | 1    |
| 30  | 5540-30   | Pin            | 1    |
| 31  | 5540-31   | Oil Seal       | 1    |
| 32  | 5540-32   | Rear Gasket    | 1    |
| 33  | 5540-33   | Back Cover     | 1    |
| 34  | 5540-34   | Screw          | 4    |
| 35  | 5540-35   | Pin            | 1    |
| 36  | 5540-36   | Spring         | 1    |
| 37  | 5540-37   | Screw          | 1    |
| 38  | 5540-38   | Muffle Cover   | 1    |
| 39  | 5540-39   | Screw          | 2    |
| 40  | 5540-40   | Screw          | 1    |
| 41  | 5540-41   | Nose Rubber    | 1    |
| 42  | 5540-42   | Protect Rubber | 1    |
| 43  | 5540-43   | O-Ring         | 1    |